Category B+E Safety Questions 01/07/2008							
		Show					
Question	Topic	/ Tell	Question		Answer		
			Open the bonnet, identify where the brake fluid				
			reservoir is and tell me how you would check that		Identify reservoir, check level against high/low		
BE1	Brake Fluid	Show	you have a safe level of hydraulic brake fluid.		markings.		
			Show me how you would check that the direction		Applying the indicators or hazard warning switch		
BE2	Indicators	Show	indicators are working.		and checking functioning of all indicators.		
					The load should be distributed evenly throughout		
					the trailer. Heavy items should be loaded as low		
					as possible so that they are mainly over the		
					axle(s). Bulkier, lighter items should be		
					distributed to give a suitable 'nose weight' at the		
			Tell me the main safety factors involved in loading		towing coupling. The nose weight should never		
BE3	Loading	Tell	this vehicle.		exceed the vehicle manufacturer's specifications.		
	Ŭ				Any load must be carried so that it does not		
					endanger other road users. It must be securely		
					stowed within the size and weight limits for the		
					vehicle. The load needs to be secure so that it		
			Tell me the main safety factors involved in		cannot move or fall from the vehicle when		
BE4	Loading	Tell	securing a load on this vehicle		cornering or braking.		
					Physical checks should be made to ensure that		
			Show me how you would check that your vehicle &		windows, roof light and all doors, including cargo		
BE5	Doors	Show	trailer doors are secure		doors, are properly closed.		
			Tell me how you would check the tyres to ensure		No cuts and bulges, 1.6mm of tread depth across		
			that they have sufficient tread depth and that their		the central ¾ of the breadth of the tyre and		
BE6	Tyres	Tell	general condition is safe to use on the road.		around the entire outer circumference.		
			Show me how you would check that the horn is		Check is carried out by using control (turn on		
BE7	Horn	Show	working (off road only).		ignition if necessary).		
			Open the bonnet, identify where you would check		Identify high/low level markings on header tank		
	Engine		the engine coolant level and tell me how you would		where fitted or radiator filler cap, and describe		
BE8	coolant	Show	check that the engine has the correct level.		how to top up to correct level.		

Category B+E Safety Questions 01/07/2008							
		Show					
Question	Topic	/ Tell	Question	Answer			
				Demonstrate by applying parking brake that			
			Show me how you would check the parking brake	when it is fully applied it secures itself, and is not			
BE9	Handbrake	Show	for excessive wear.	at the end of the working travel.			
	Windscree		Show me how you would clean the windscreen	Operate control to wash and wipe windscreen			
BE10	n Washers	Show	using the windscreen washer and wipers.	(turn ignition on if necessary).			
				Set all relevant controls including; fan,			
				temperature, air direction / source and heated			
			Show me how you would set the demister controls	screen to clear windscreen and windows. Engine			
	Windscree		to clear all the windows effectively, this should	does not have to be started for this			
BE11	n Demister	Show	include both front and rear screens.	demonstration			
			Show me how you would switch on the rear fog	Operate switch (turn on dipped headlights and			
	Rear fog		light(s) and explain when you would use it/them.	ignition if necessary). Check warning light is on.			
BE12	light	Show	(No need to exit vehicle)	Explain use.			
			Show me how you switch your headlight from				
		l	dipped to main beam and explain how you would	Operate switch (with ignition or engine on if			
BE13	Headlights	Show	know the main beam is on whilst inside the car	necessary), check with main beam warning light.			
			Show me how you would check that the brake				
			lights are working on this vehicle. (I can assist you,	Operate brake pedal, make use of reflections in			
			if you need to switch the ignition on, please don't	windows, garage doors, etc, or ask someone to			
BE14	Brake lights	Show	start the engine).	help.			
				The head restraint should be adjusted so the			
				rigid part of the head restraint is at least as high			
	l		Tell me how you make sure your head restraint is	as the eye or top of the ears, and as close to the			
	Head		correctly adjusted so it provides the best protection	back of the head as is comfortable. N.B. Some			
BE15	Restraints	Tell	in the event of a crash.	restraints might not be adjustable.			